


# BOOM STAND BRACKETS

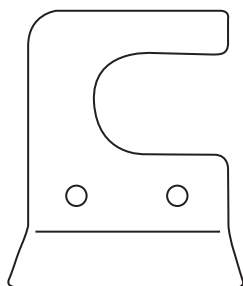


x 2




x 4

- 1 Measure and mark at 35% of panel height (from top of panel on both sides). Place brackets against either side of frame and fix into place using screws provided.

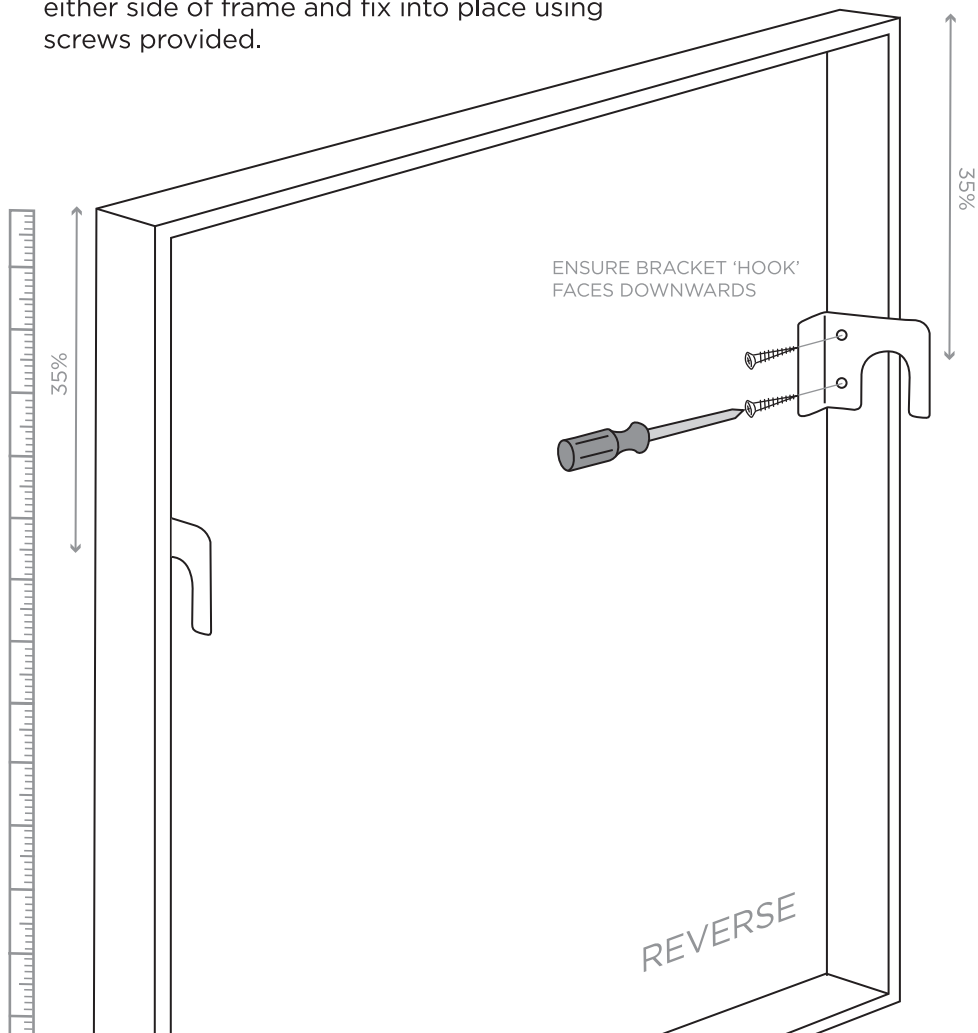

- 2 Set boom stand so the boom is horizontal and wider than the panel.

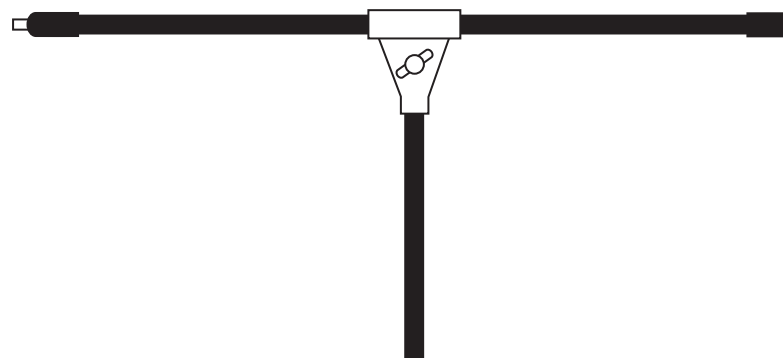

- 3 Hang panel over the boom.

