



FREESTANDING PANEL FEET



- 1 Remove protective film covering from feet.

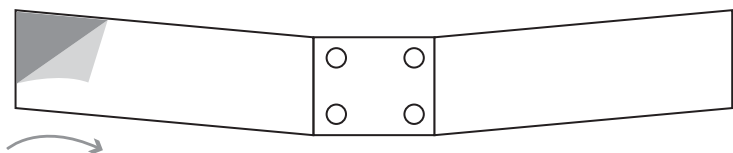

- 2 Screws come pre-drilled in the panel. Turn panel onto side, undo screws, line up pre-drilled foot holes with panel holes and screw into place securely.

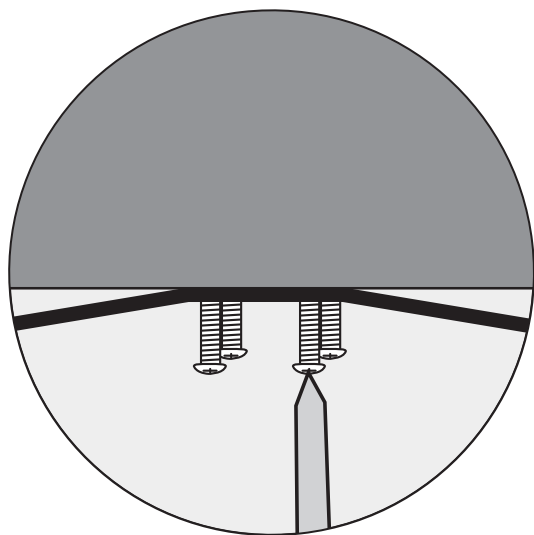

- 3 Stand upright on feet.

